





Installing PowerBook G4 Aluminum 17" 1.67 GHz (High-Res) Hard Drive

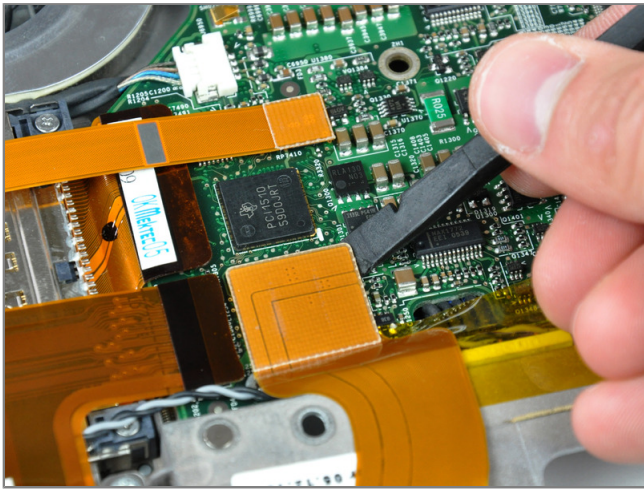

Step 1 - Hard Drive

- Use the flat end of a spudger to pry the sound card ribbon cable connector off the logic board.
- Move the sound card ribbon cable away from the face of the hard drive.
- It is not necessary to disconnect the sound card ribbon cable from the sound card.

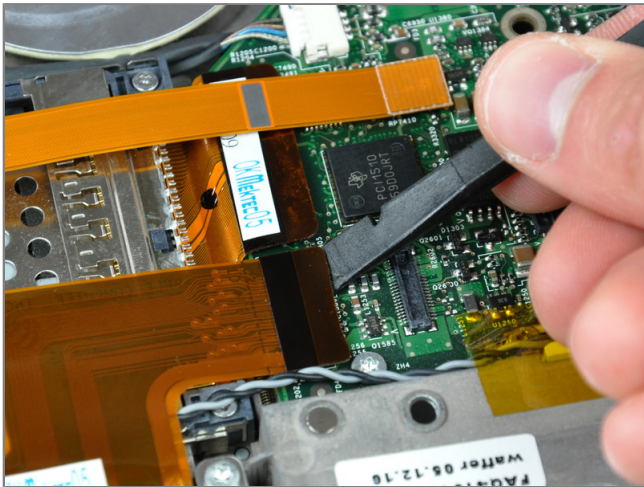

Step 2

- Use the flat end of a spudger to pry the hard drive ribbon cable connector up off the logic board.



Step 3

- Remove the following four screws:
 - Three 11.1 mm T8 Torx.
 - One 3.9 mm T8 Torx.
- Lift the hard drive out of the lower case.

